
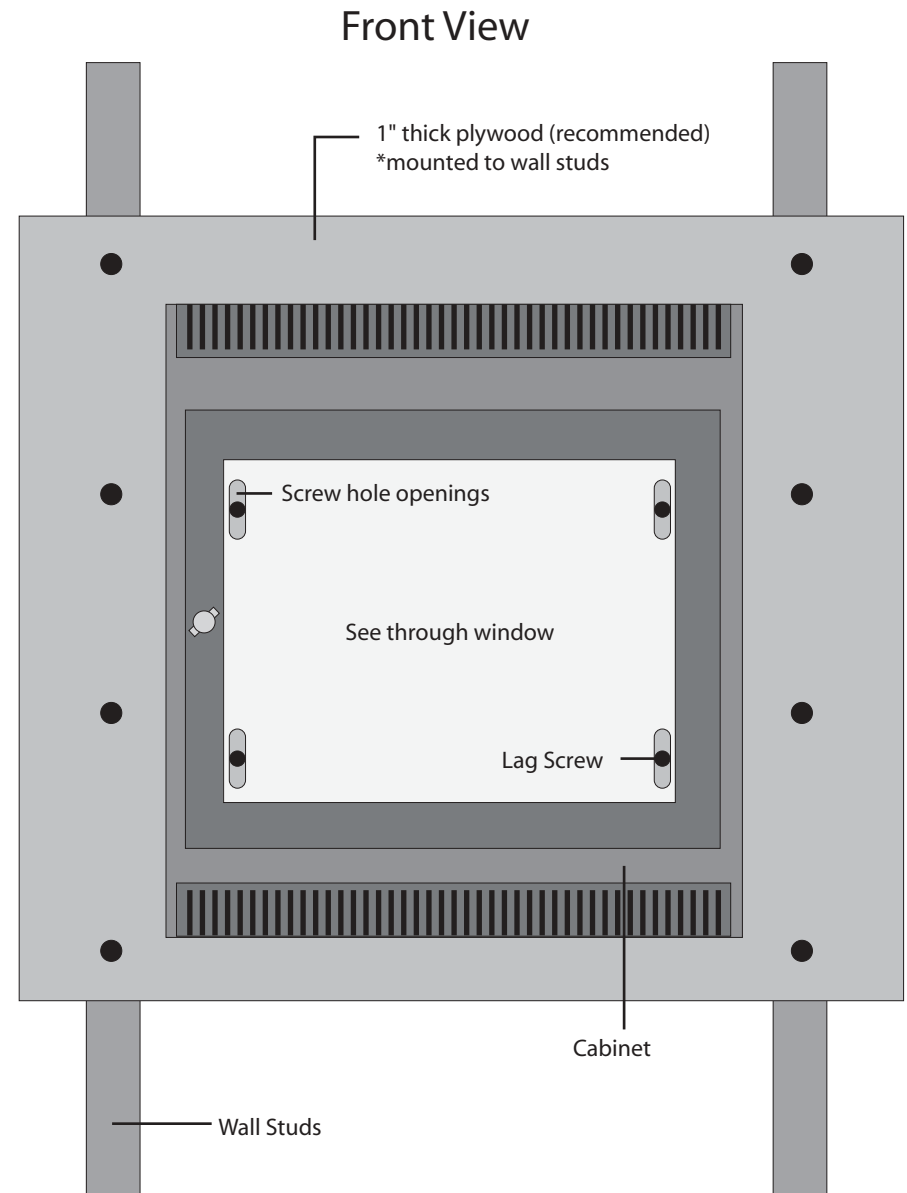


# CAB1019WALL Installation Instructions

**NOTE:** These instructions are for installing the CAB1019WALL into drywall. If installing the CAB1019WALL into brick or cement, please see the reverse side.

1. To ensure the stability of your CAB1019WALL, StarTech.com recommends that you secure the unit to a 1" thick piece of plywood that has been mounted to the wall studs. Locate the studs in your wall and mount a sheet of plywood, making sure that the plywood is securely connected.
2. Mount the unit to the plywood using lag screws.

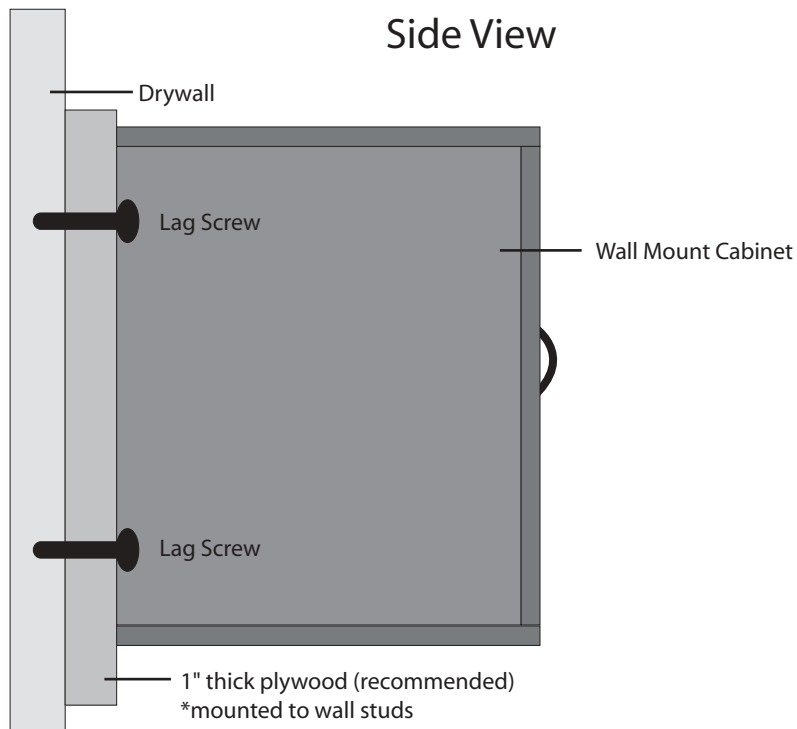

# CAB1019WALL Installation Instructions

**NOTE:** These instructions are for installing the CAB1019WALL into a brick or cement wall. If installing the CAB1019WALL into drywall, please see the reverse side.

1. Using Figure 1 (below), mark the location of the four screw holes.
2. Drill each hole 1.57" (40mm) deep and 0.48" (11.1mm) across.
3. Connect Parts A and B of the wall anchor (see Figure 2) and insert the wall anchor into the hole (see Figure 3).
4. Hammer the anchor until it is flush with the wall (see Figure 4).
5. When you have mounted all four wall anchors, position the CAB1019WALL so it is lined up with the wall anchors and screw the unit into place.

Figure 1


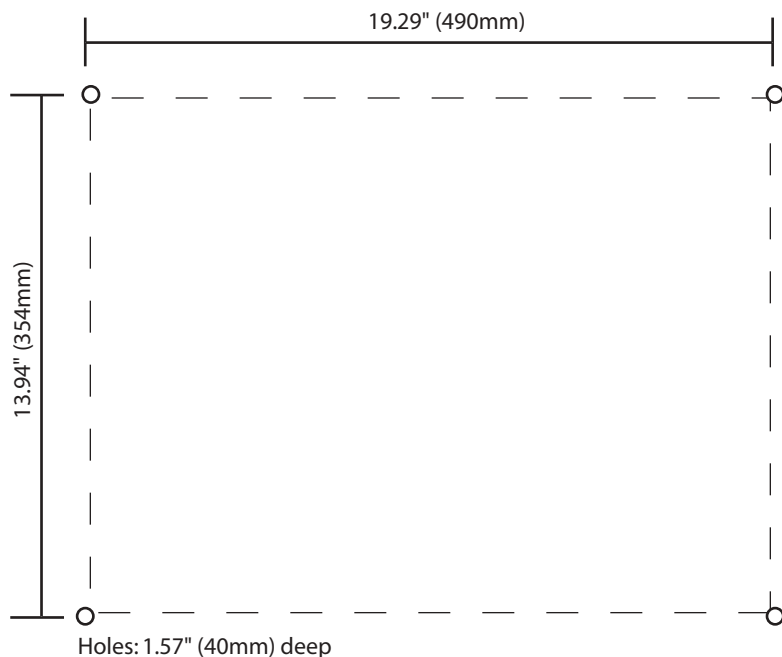


Figure 2

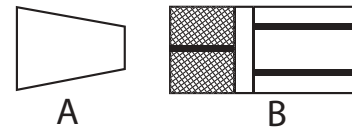

Hole:  
1.57" (40mm)  
deep

Figure 3


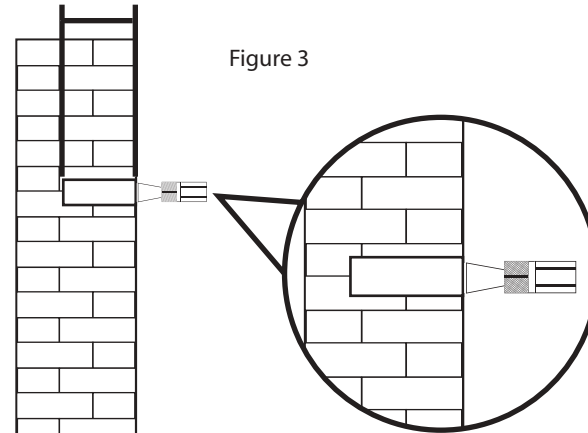


Figure 4

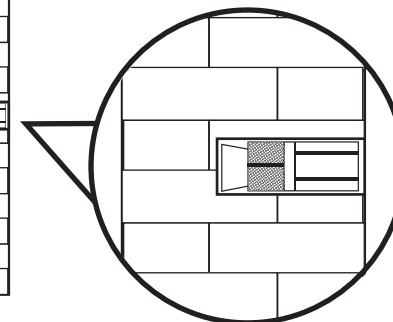

**StarTech.com**

The Professionals' Source for Hard-to-Find Computer Parts